LifeFitness

ARCTIC SILVER 95SW Stairclimber

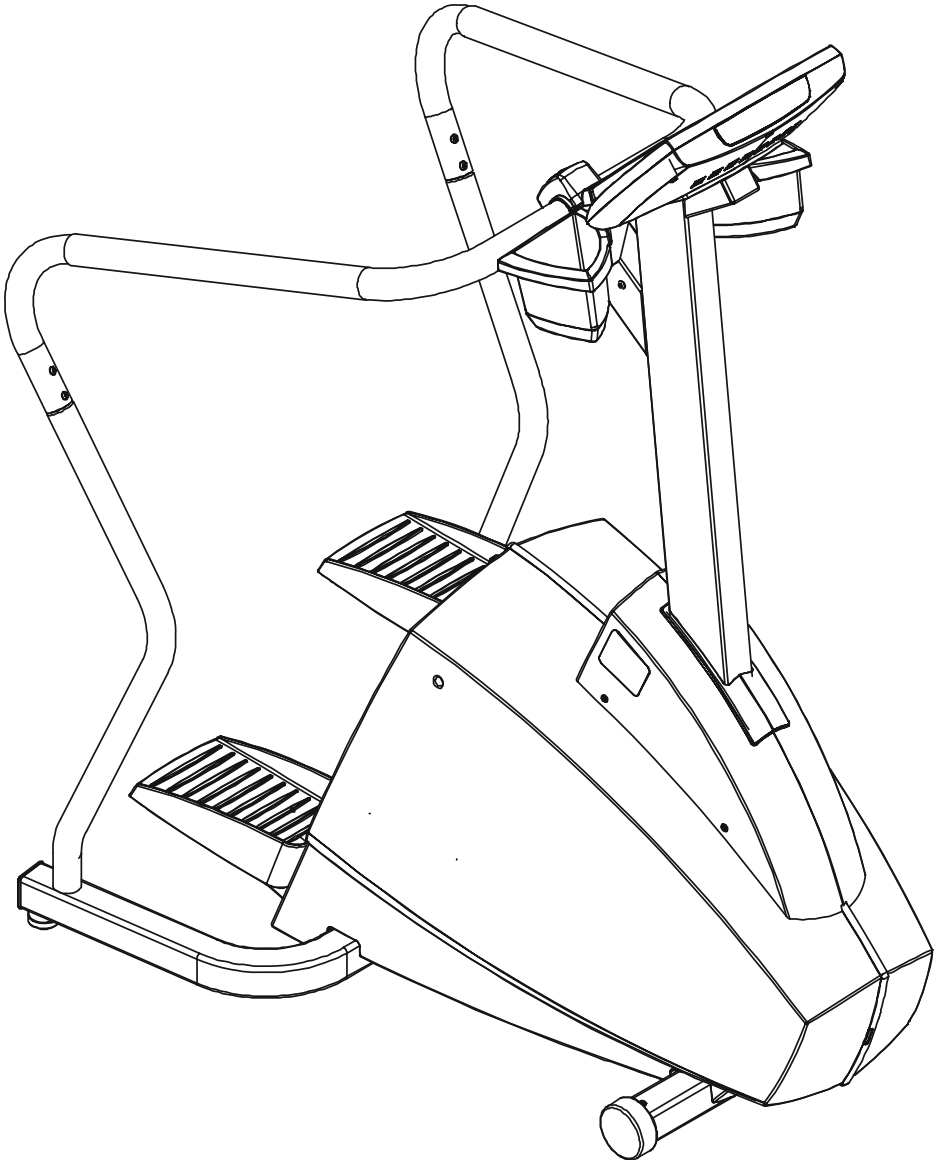

Customer Support Services
PARTS MANUAL

revised 14 Jul 2008

OPERATION MANUAL	M051-00K47-A025
HARDWARE BAG	AK47-00106-0000
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	 0017-00008-0204 0017-00008-0205 0017-00008-0206
ACCESS PANEL ASSEMBLY CONSISTS OF: 1) COAX CABLE 2) POWER EXT. CABLE 3) MOUNTING PLATE 4) F TYPE CONNECTOR	 AK32-00020-0002 AK32-00078-0001 0K47-01197-0001 0017-00021-2846
SERVICE MANUAL	M051-00K47-A013

NOTE: ADDING THE LCD BOLT-ON SCREEN

TO A 95SW-0XXX-02 MAKES IT A 95SER-0XXX-02.

Page

CONSOLE COMPONENTS 4

FRAME COMPONENTS..... 5

SHROUDS AND PEDAL TUBE 6

PEDAL ASSEMBLY..... 7

CLUTCH/SHAFT/PULLEY ASSEMBLY 8

LEFT CLUTCH ASSEMBLY 9

CROSSOVER PULLEY ASSEMBLY..... 10

ALTERNATOR ASSEMBLY..... 11

GUIDE ROLLERS 12

POWER CONTROL BOARD & RESISTORS 13

POLAR RECEIVER ASSEMBLY 14

CABLES..... 15

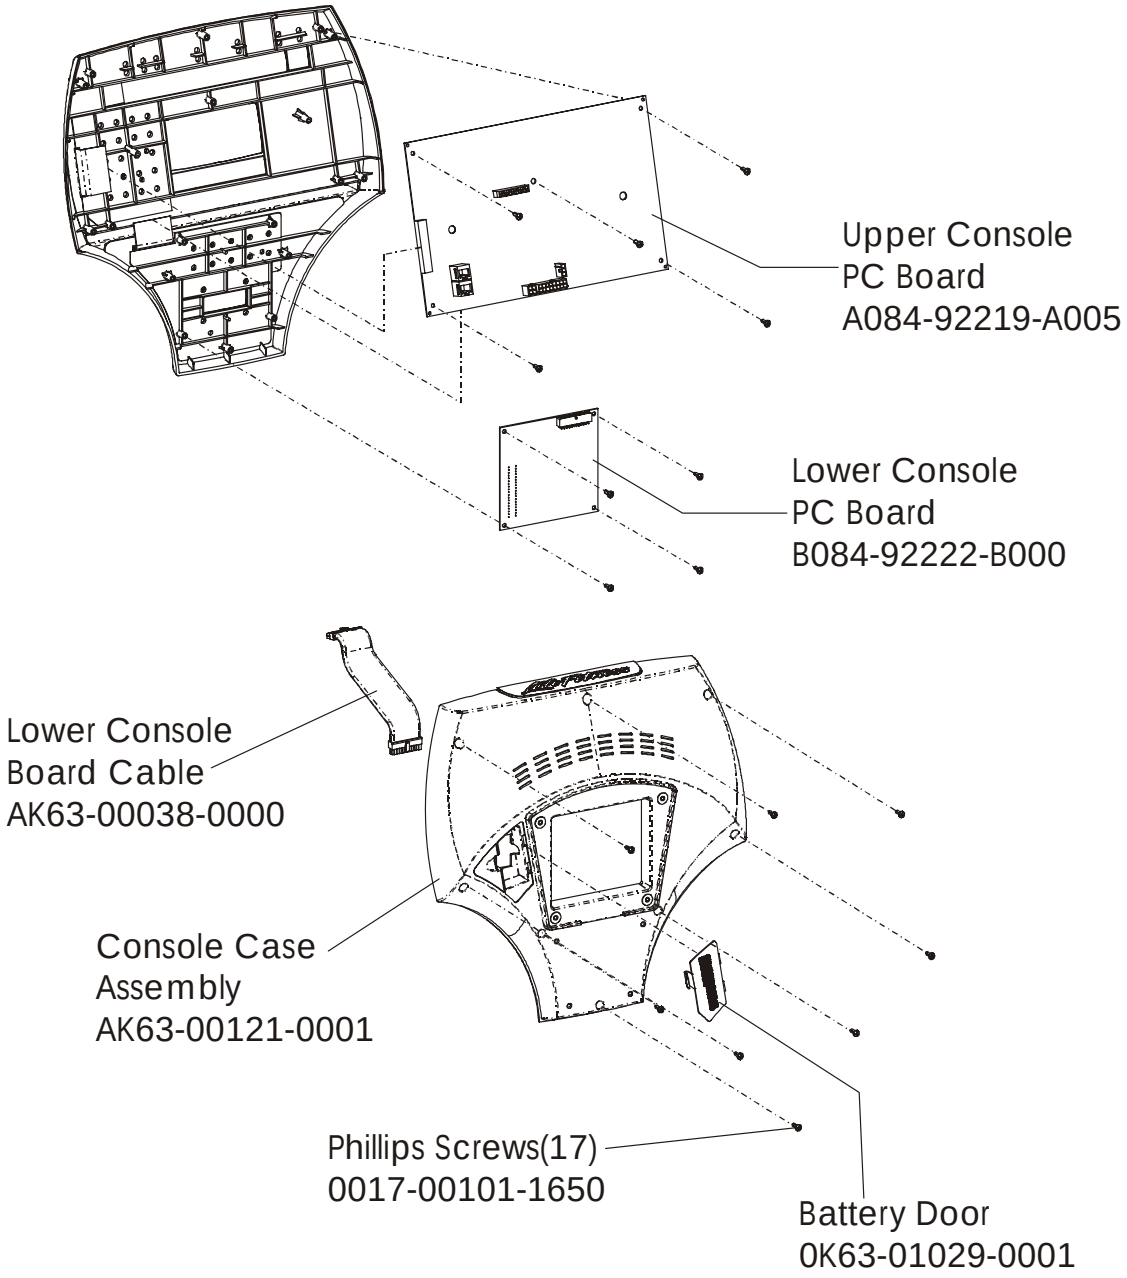

Console Assembly	Overlay/Bezel/Switch Assy.
AK47-00094-0001 Eng Met	AK47-00098-0001 Eng Met
AK47-00094-0003 Ger Met	AK47-00098-0003 Ger Met
AK47-00094-0004 Spn Met	AK47-00098-0004 Spn Met
AK47-00094-0006 Jap Met	AK47-00098-0006 Jap Met
AK47-00094-0007 Frn Met	AK47-00098-0007 Frn Met
AK47-00094-0008 Itl Met	AK47-00098-0008 Itl Met
AK47-00094-0009 Dut Met	AK47-00098-0009 Dut Met
AK47-00094-0010 Por Met	AK47-00098-0010 Por Met

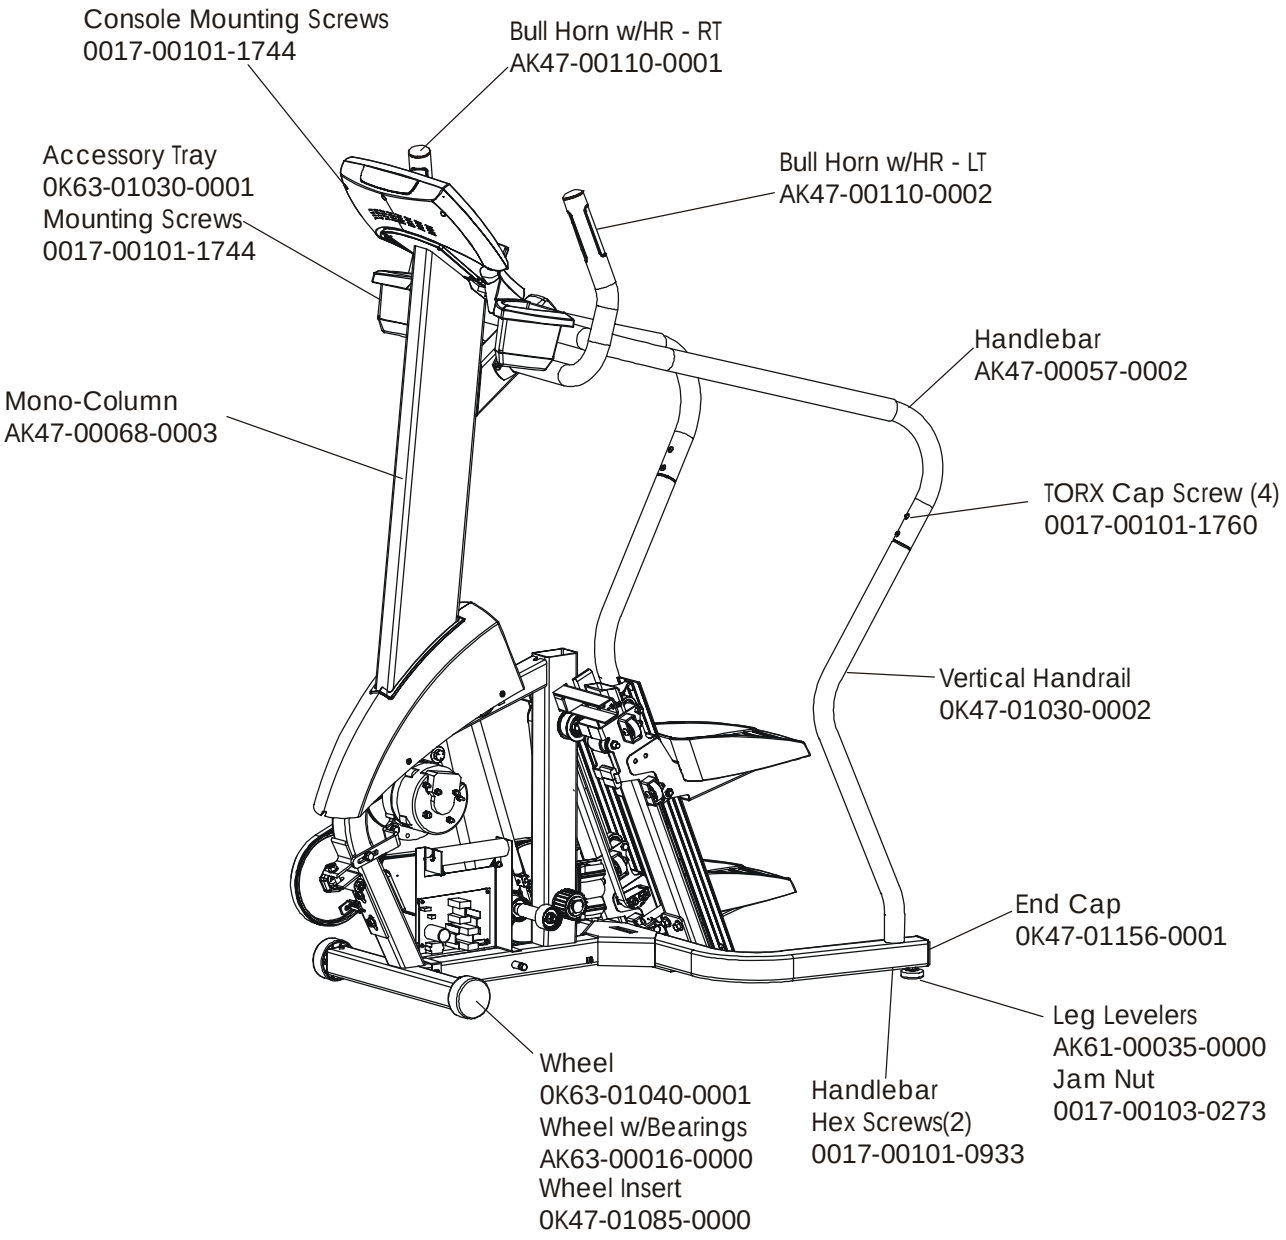
Console Mounting Screws
0017-00101-1744
Bull Horn w/HR - RT
AK47-00110-0001
Accessory Tray
0K63-01030-0001
Mounting Screws
0017-00101-1744
Bull Horn w/HR - LT
AK47-00110-0002
Handlebar
AK47-00057-0002
Mono-Column
AK47-00068-0003
TORX Cap Screw (4)
0017-00101-1760
Vertical Handrail
0K47-01030-0002
End Cap
0K47-01156-0001
Leg Levelers
AK61-00035-0000
Jam Nut
0017-00103-0273
Wheel
0K63-01040-0001
Wheel w/Bearings
AK63-00016-0000
Wheel Insert
0K47-01085-0000
Handlebar
Hex Screws(2)
0017-00101-0933

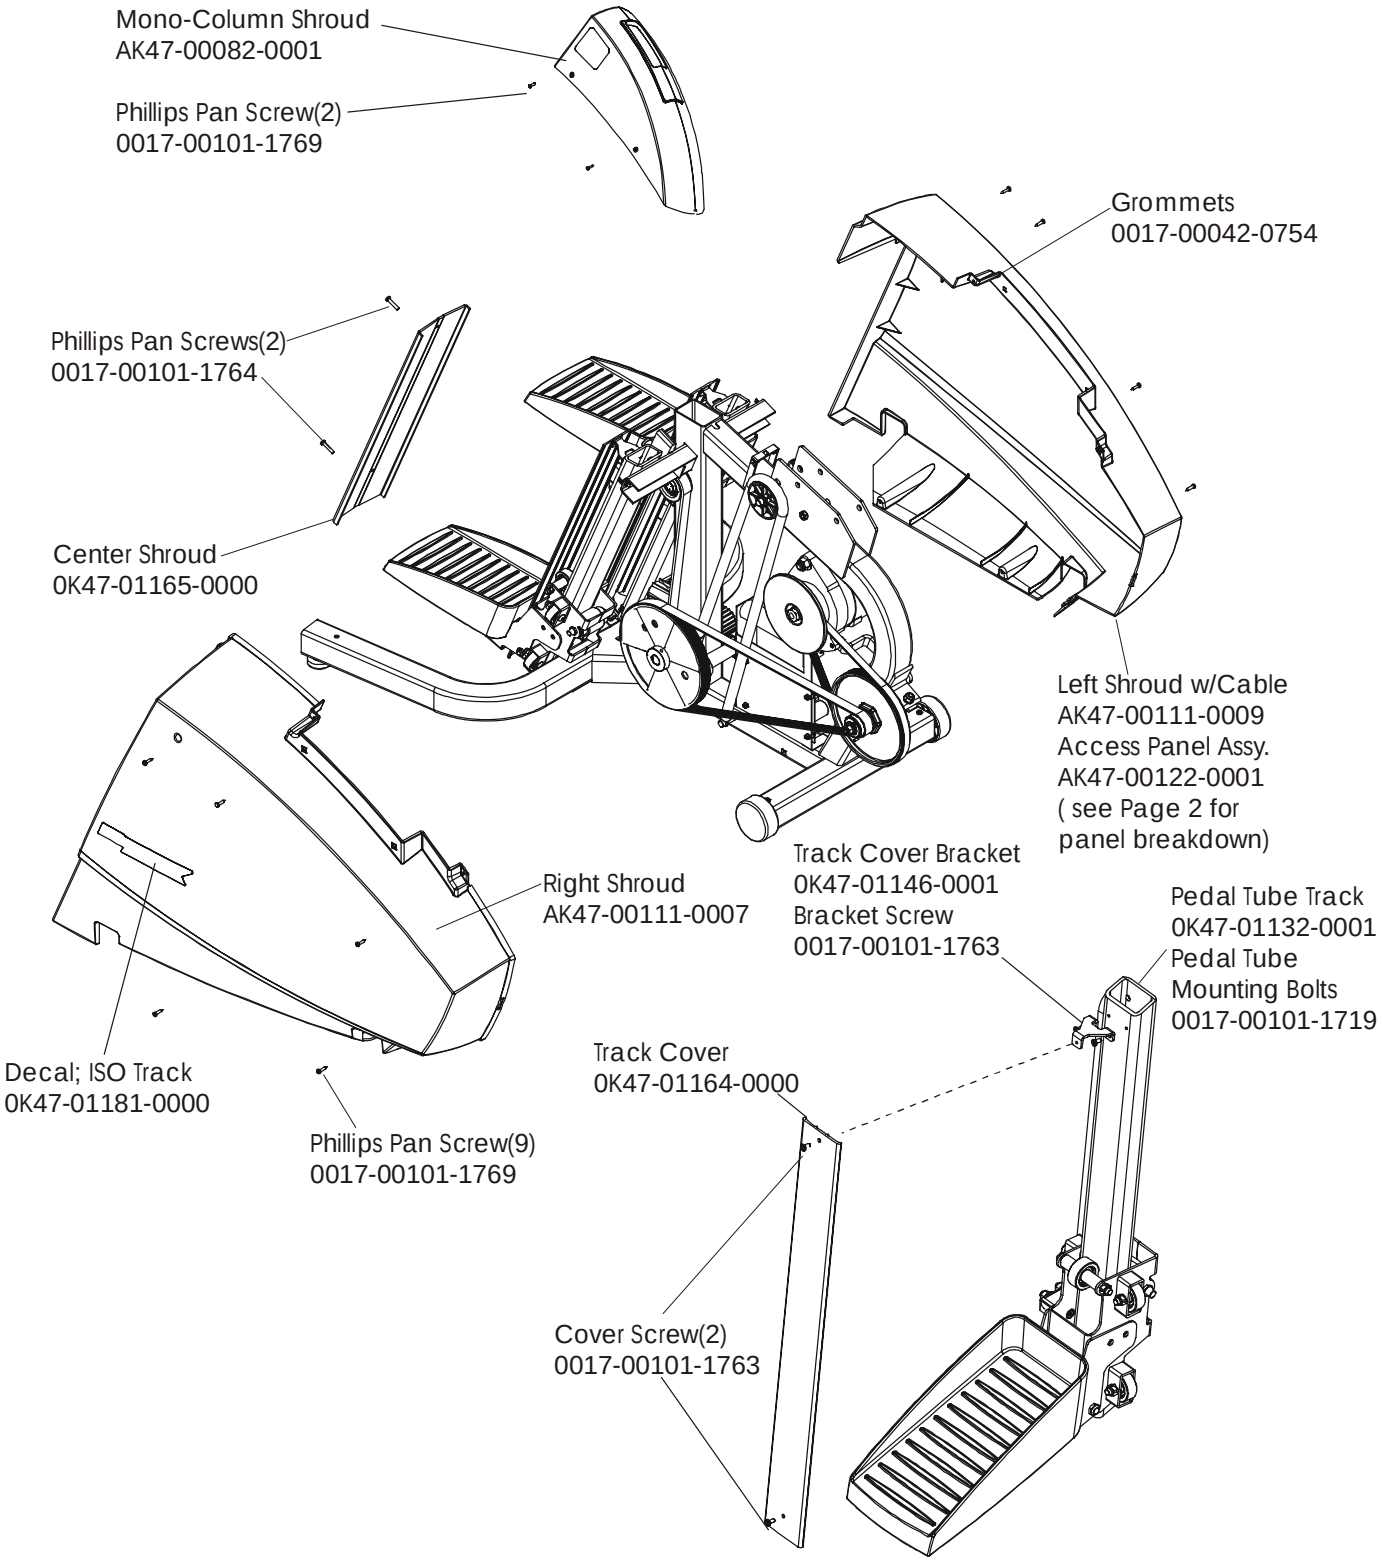
Mono-Column Shroud
AK47-00082-0001
Phillips Pan Screw(2)
0017-00101-1769
Grommets
0017-00042-0754
Phillips Pan Screws(2)
0017-00101-1764
Center Shroud
0K47-01165-0000
Left Shroud w/Cable
AK47-00111-0009
Access Panel Assy.
AK47-00122-0001
(see Page 2 for
panel breakdown)
Track Cover Bracket
0K47-01146-0001
Bracket Screw
0017-00101-1763
Right Shroud
AK47-00111-0007
Pedal Tube Track
0K47-01132-0001
Pedal Tube
Mounting Bolts
0017-00101-1719
Track Cover
0K47-01164-0000
Decal; ISO Track
0K47-01181-0000
Phillips Pan Screw(9)
0017-00101-1769
Cover Screw(2)
0017-00101-1763

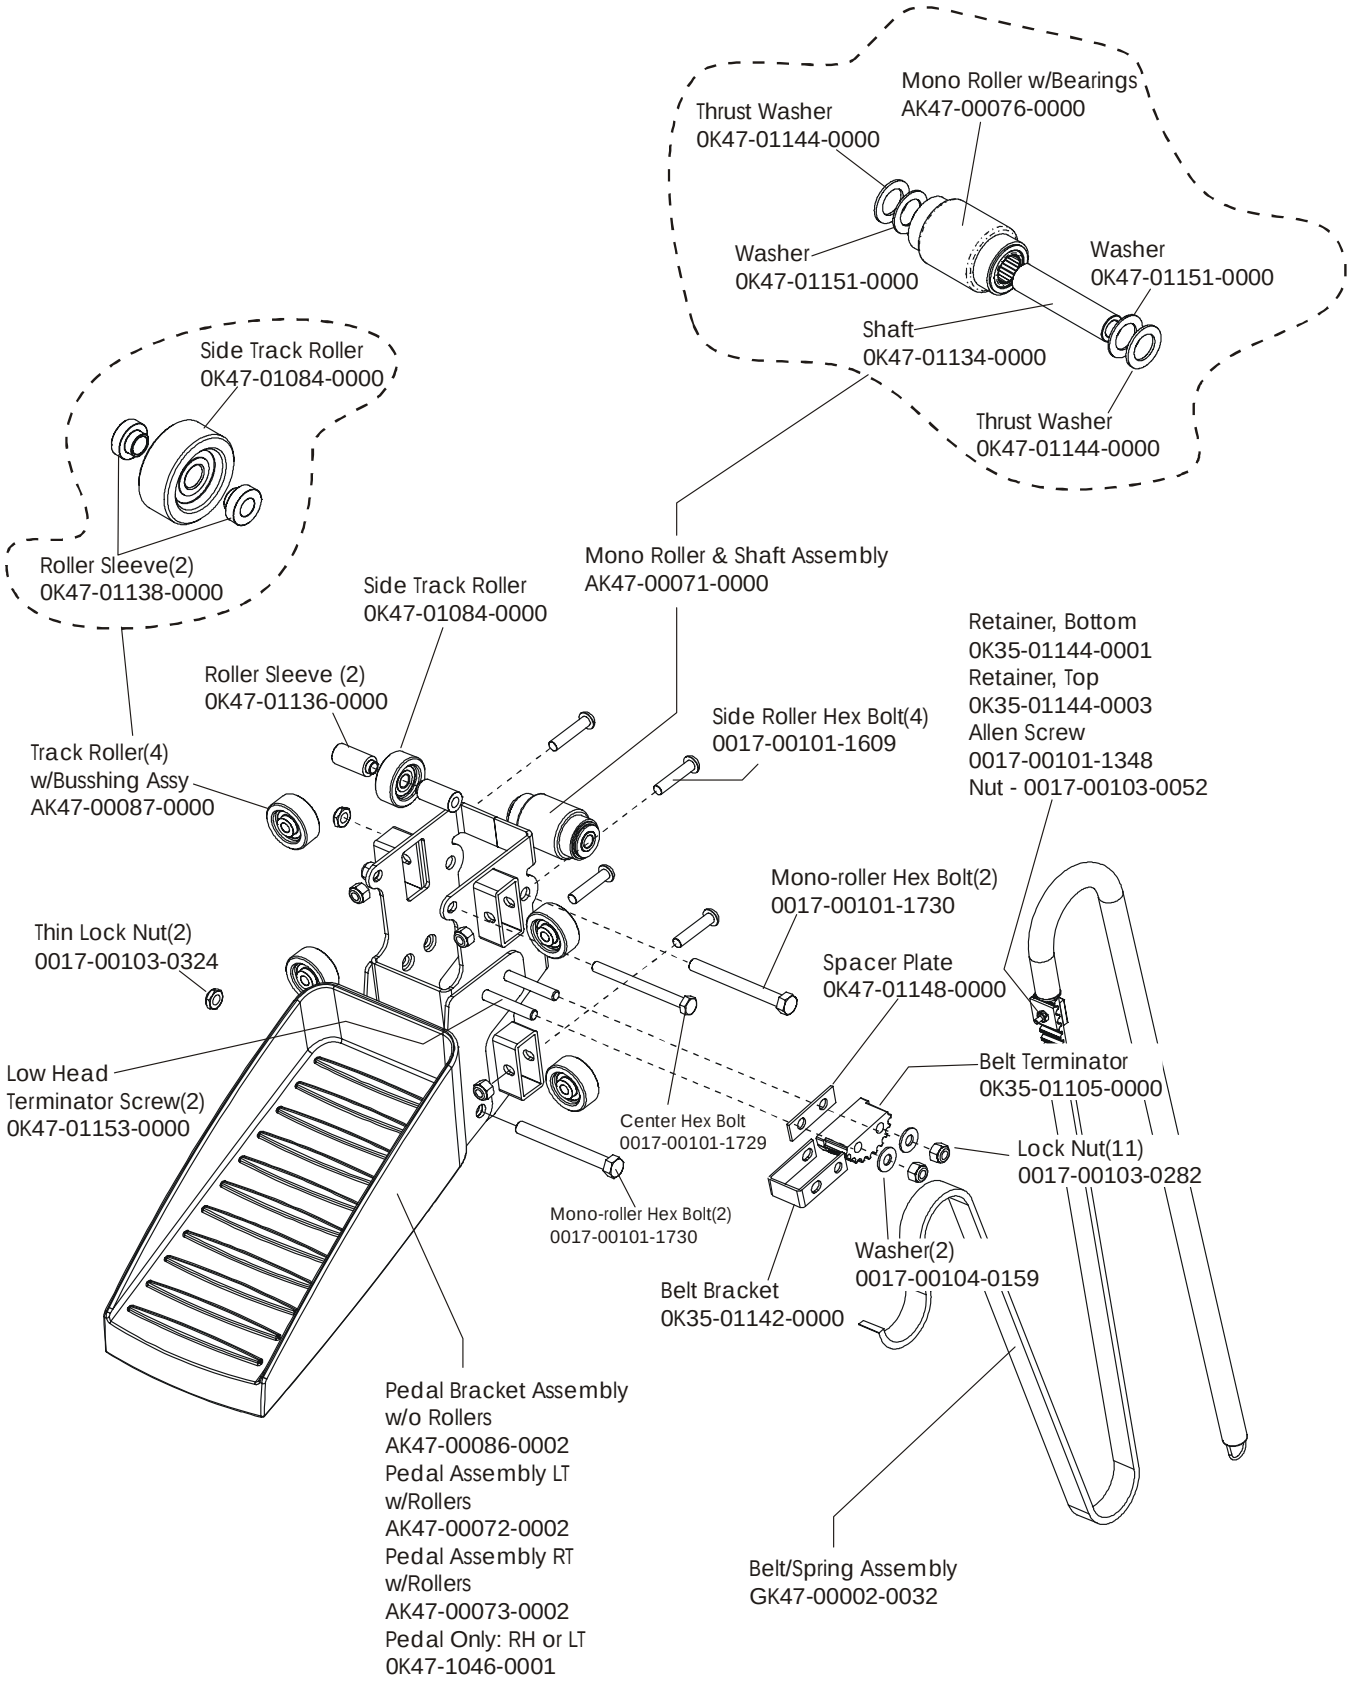
Mono Roller w/Bearings
AK47-00076-0000
Thrust Washer
0K47-01144-0000
Washer
0K47-01151-0000
Washer
0K47-01151-0000
Shaft
0K47-01134-0000
Thrust Washer
0K47-01144-0000
Side Track Roller
0K47-01084-0000
Roller Sleeve(2)
0K47-01138-0000
Mono Roller & Shaft Assembly
AK47-00071-0000
Side Track Roller
0K47-01084-0000
Roller Sleeve (2)
0K47-01136-0000
Side Roller Hex Bolt(4)
0017-00101-1609
Retainer, Bottom
0K35-01144-0001
Retainer, Top
0K35-01144-0003
Allen Screw
0017-00101-1348
Nut - 0017-00103-0052
Track Roller(4)
w/Busshing Assy
AK47-00087-0000
Mono-roller Hex Bolt(2)
0017-00101-1730
Thin Lock Nut(2)
0017-00103-0324
Spacer Plate
0K47-01148-0000
Belt Terminator
0K35-01105-0000
Low Head
Terminator Screw(2)
0K47-01153-0000
Center Hex Bolt
0017-00101-1729
Lock Nut(11)
0017-00103-0282
Mono-roller Hex Bolt(2)
0017-00101-1730
Washer(2)
0017-00104-0159
Belt Bracket
0K35-01142-0000
Pedal Bracket Assembly
w/o Rollers
AK47-00086-0002
Pedal Assembly LT
w/Rollers
AK47-00072-0002
Pedal Assembly RT
w/Rollers
AK47-00073-0002
Pedal Only: RH or LT
0K47-1046-0001
Belt/Spring Assembly
GK47-00002-0032

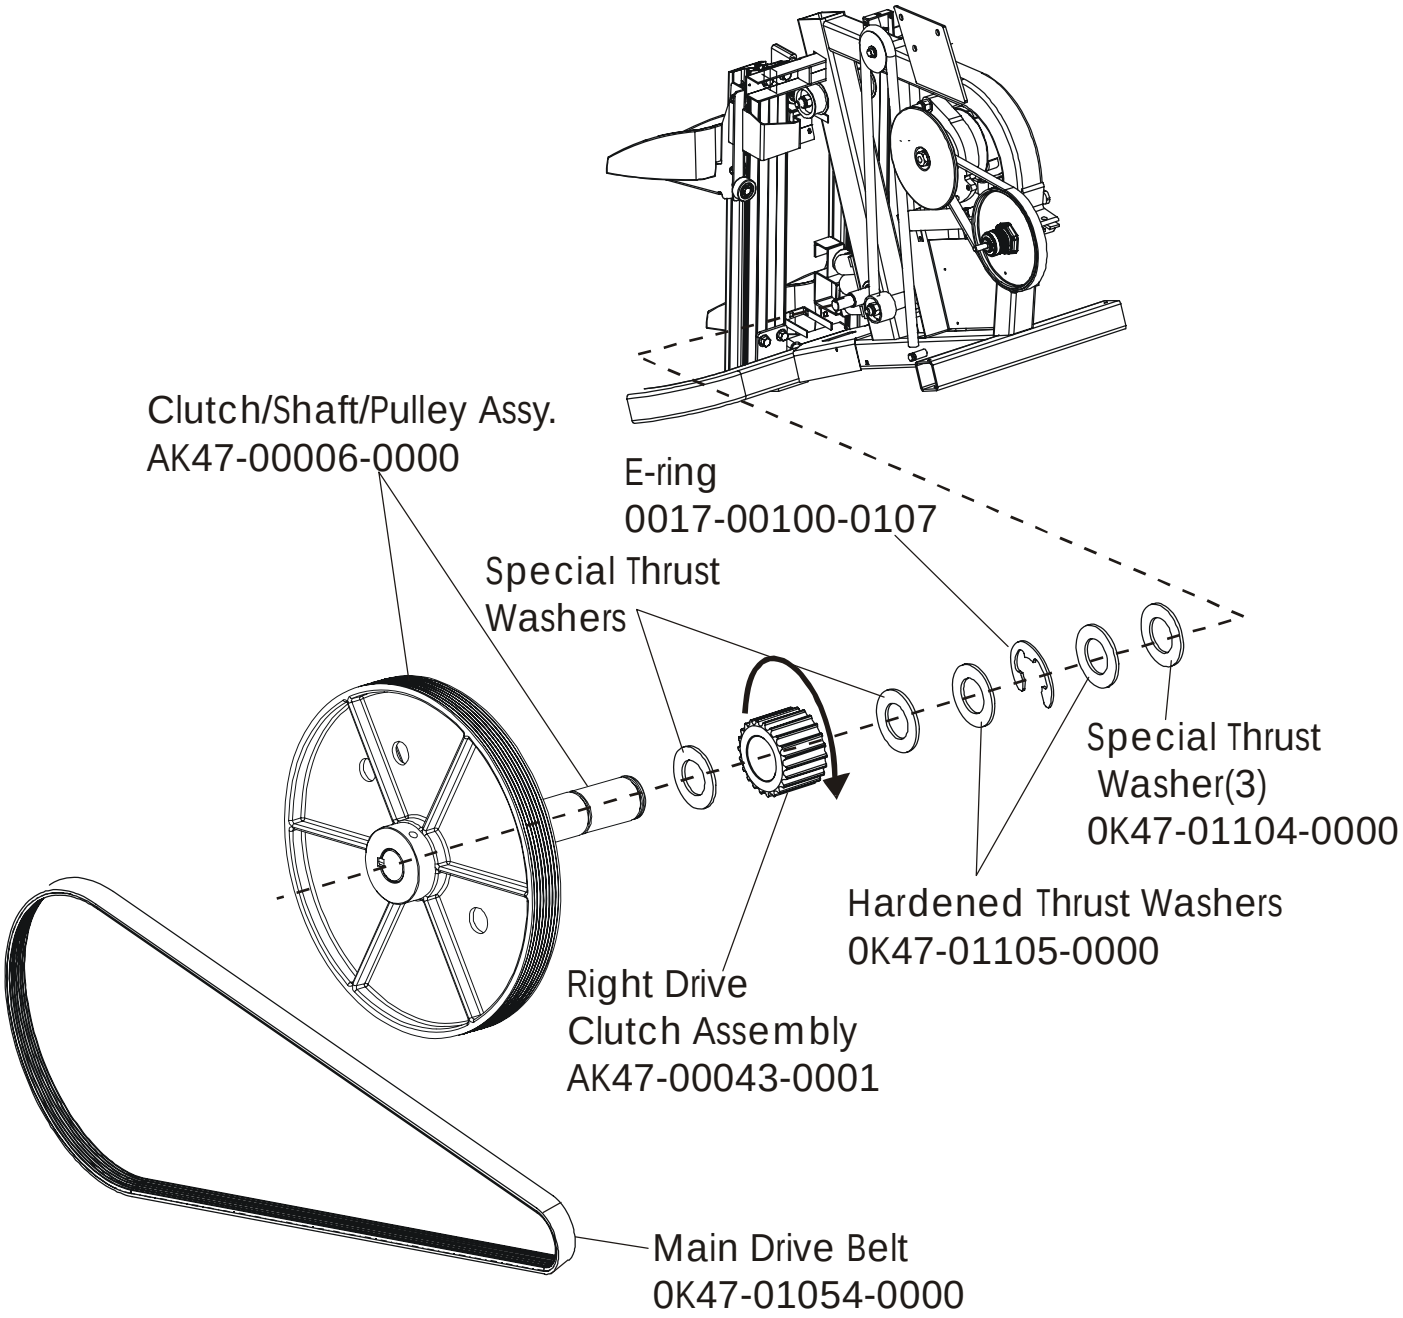
Clutch/Shaft/Pulley Assy.
AK47-00006-0000
E-ring
0017-00100-0107
Special Thrust
Washers
Special Thrust
Washer(3)
0K47-01104-0000
Hardened Thrust Washers
0K47-01105-0000
Right Drive
Clutch Assembly
AK47-00043-0001
Main Drive Belt
0K47-01054-0000

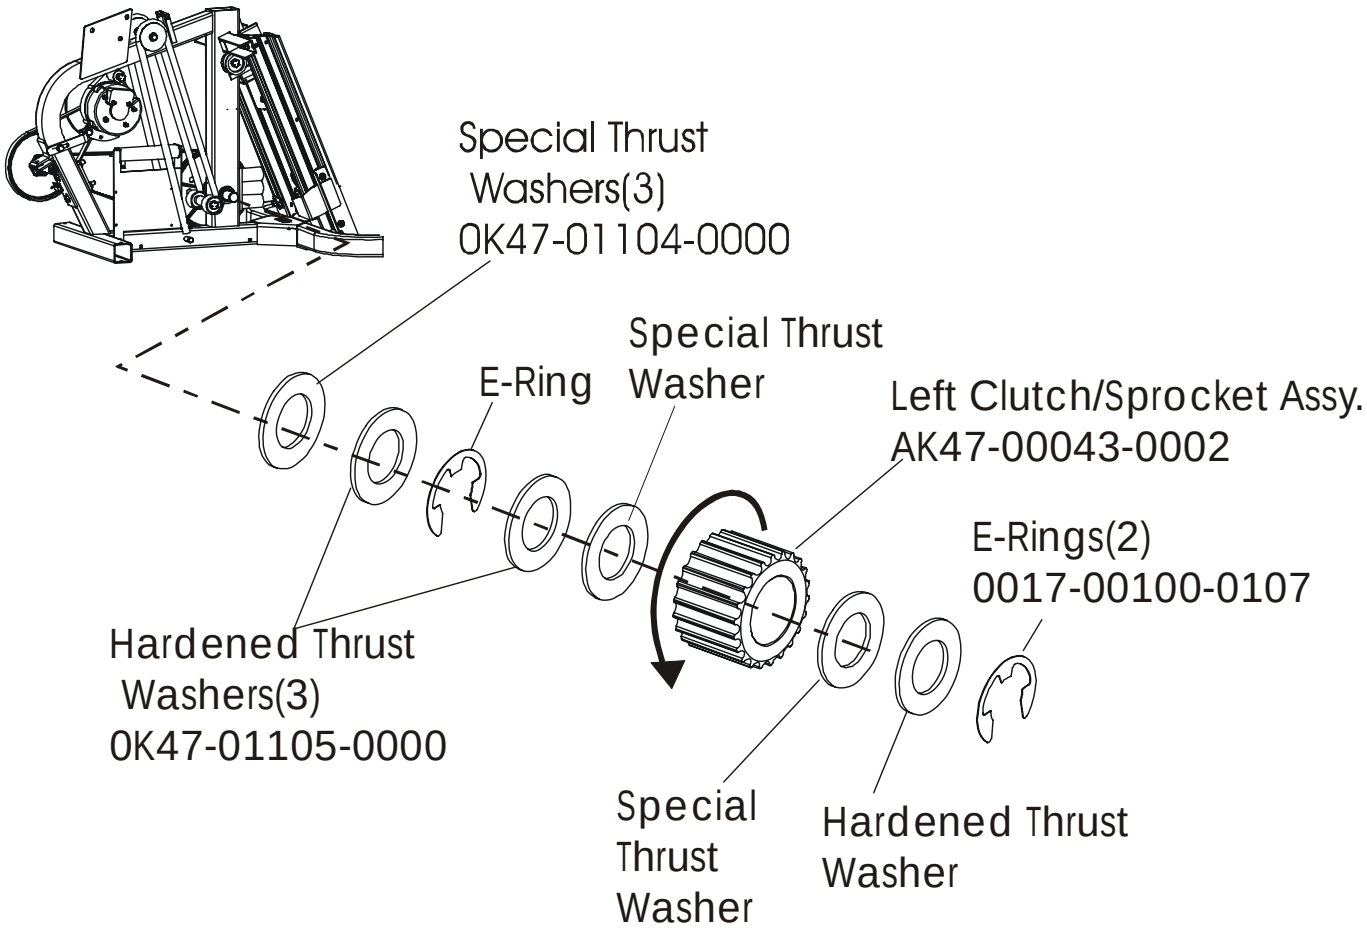
Special Thrust
Washers(3)
0K47-01104-0000
E-Ring
Special Thrust
Washer
Left Clutch/Sprocket Assy.
AK47-00043-0002
E-Rings(2)
0017-00100-0107
Hardened Thrust
Washers(3)
0K47-01105-0000
Special
Thrust
Washer
Hardened Thrust
Washer

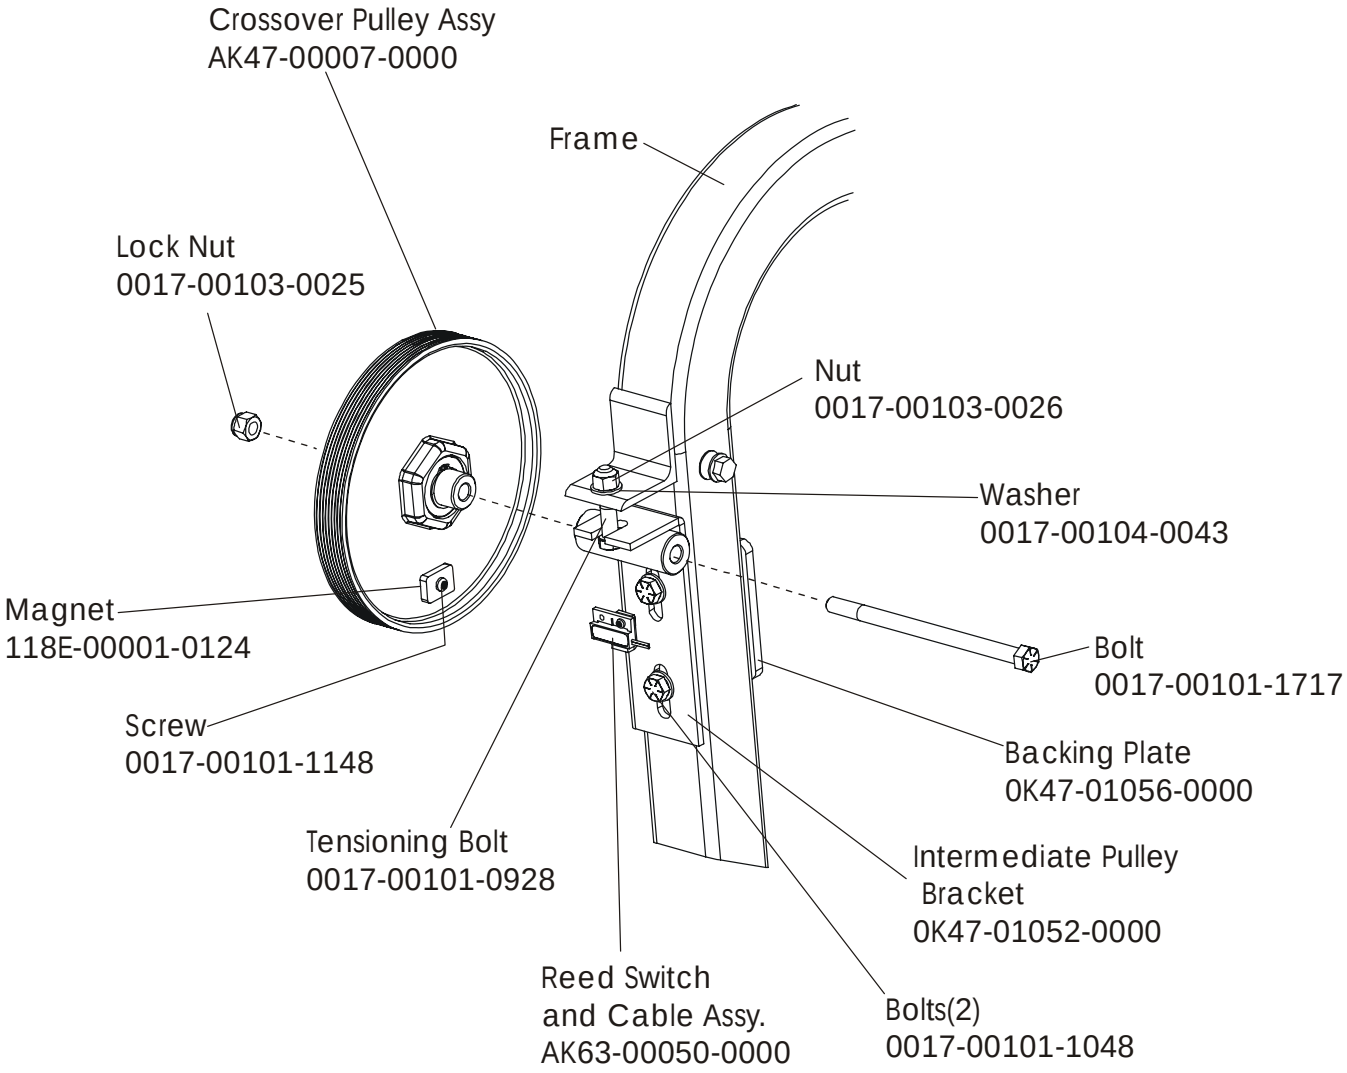
Crossover Pulley Assy
AK47-00007-0000
Frame
Lock Nut
0017-00103-0025
Nut
0017-00103-0026
Washer
0017-00104-0043
Magnet
118E-00001-0124
Bolt
0017-00101-1717
Screw
0017-00101-1148
Backing Plate
0K47-01056-0000
Tensioning Bolt
0017-00101-0928
Intermediate Pulley
Bracket
0K47-01052-0000
Reed Switch
and Cable Assy.
AK63-00050-0000
Bolts(2)
0017-00101-1048

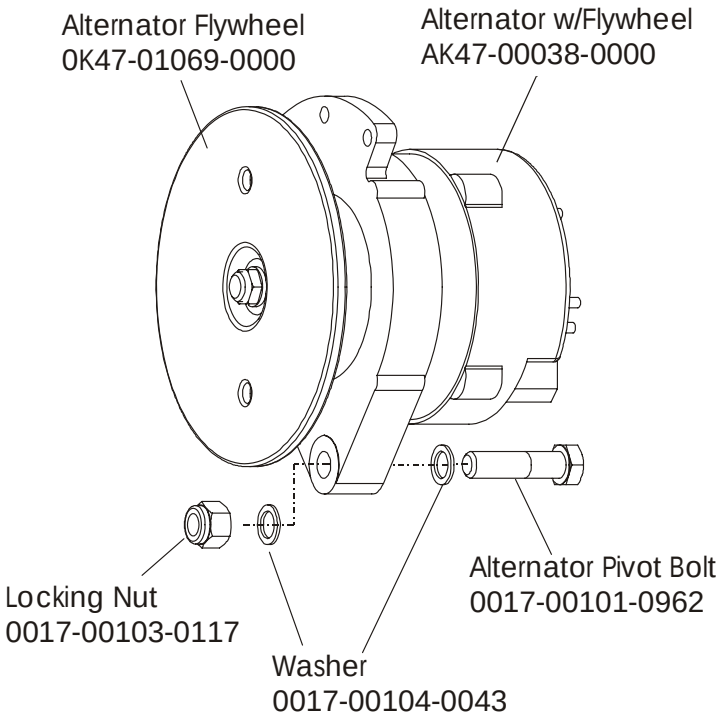
Alternator Flywheel
0K47-01069-0000
Alternator w/Flywheel
AK47-00038-0000
Locking Nut
0017-00103-0117
Washer
0017-00104-0043
Alternator Pivot Bolt
0017-00101-0962

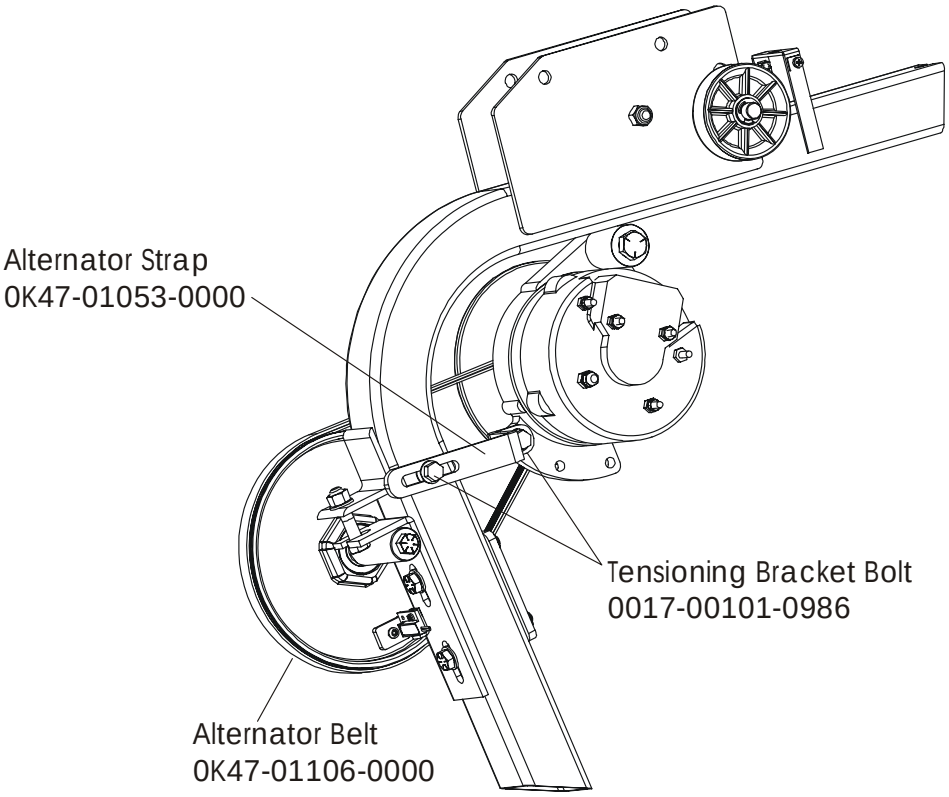
Alternator Strap
0K47-01053-0000
Tensioning Bracket Bolt
0017-00101-0986
Alternator Belt
0K47-01106-0000

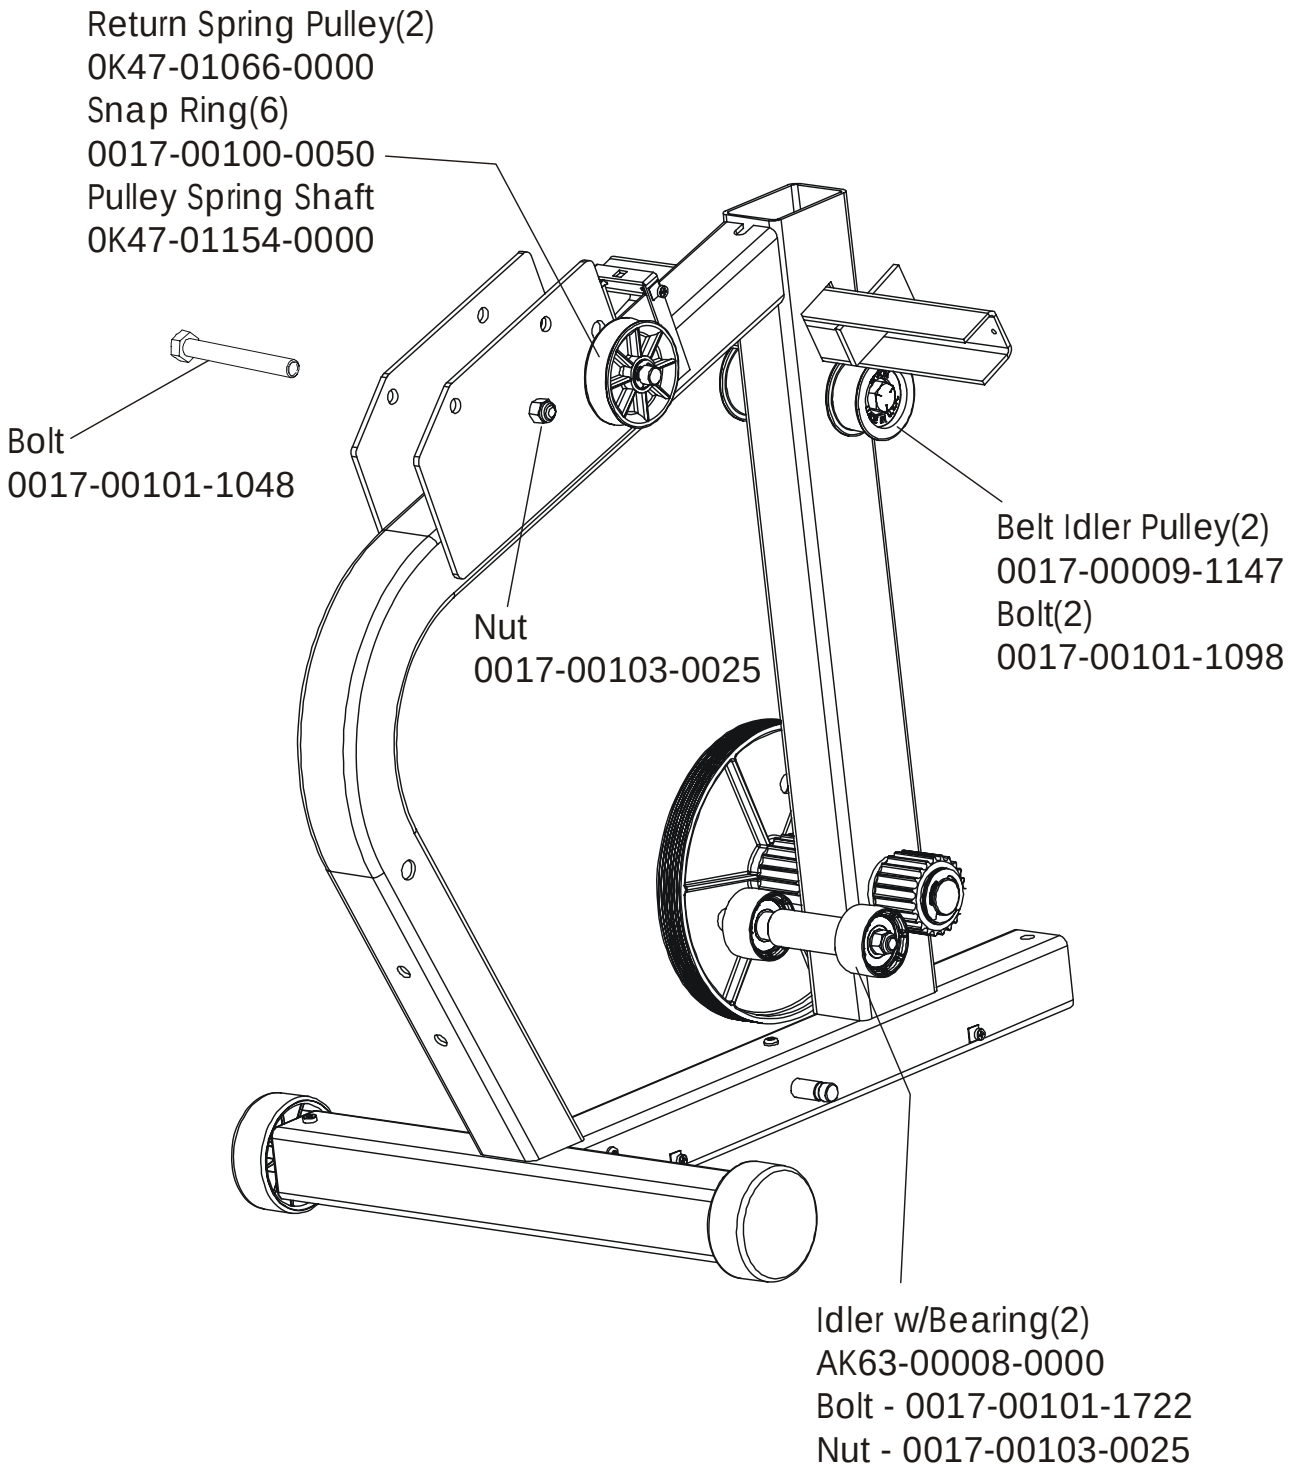
Return Spring Pulley(2)
0K47-01066-0000
Snap Ring(6)
0017-00100-0050
Pulley Spring Shaft
0K47-01154-0000
Bolt
0017-00101-1048
Nut
0017-00103-0025
Belt Idler Pulley(2)
0017-00009-1147
Bolt(2)
0017-00101-1098
Idler w/Bearing(2)
AK63-00008-0000
Bolt - 0017-00101-1722
Nut - 0017-00103-0025

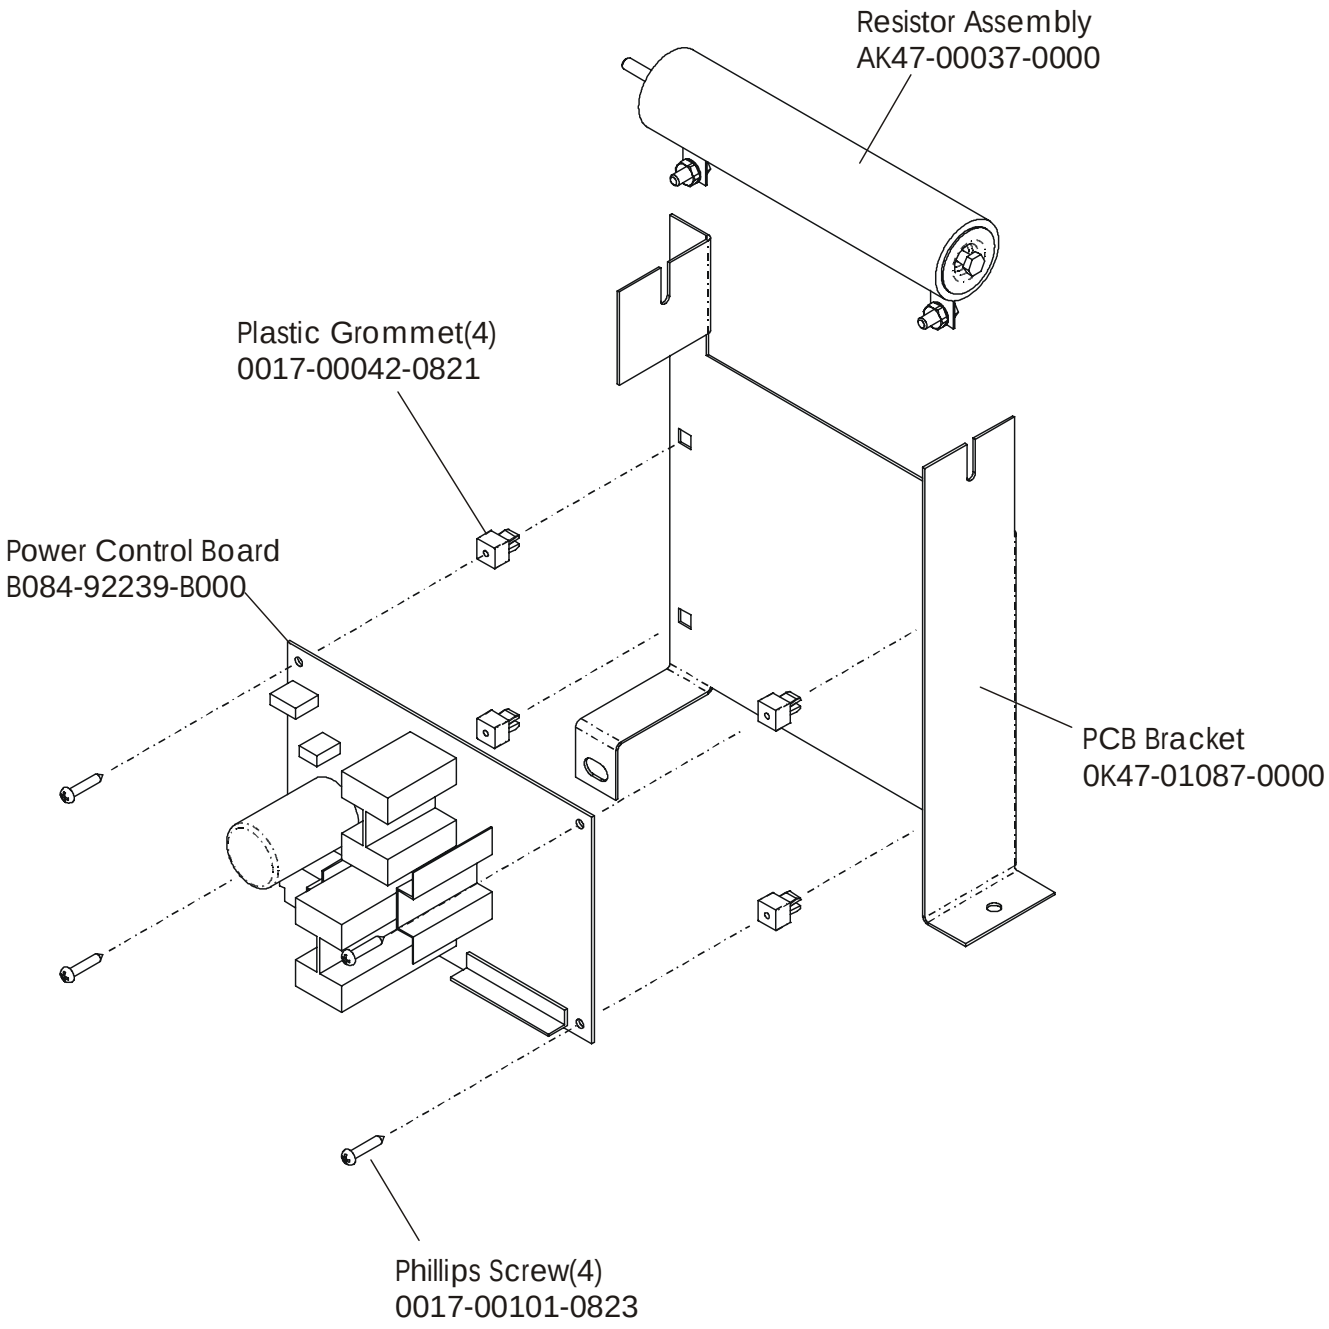
Resistor Assembly
AK47-00037-0000
Plastic Grommet(4)
0017-00042-0821
Power Control Board
B084-92239-B000
PCB Bracket
0K47-01087-0000
Phillips Screw(4)
0017-00101-0823

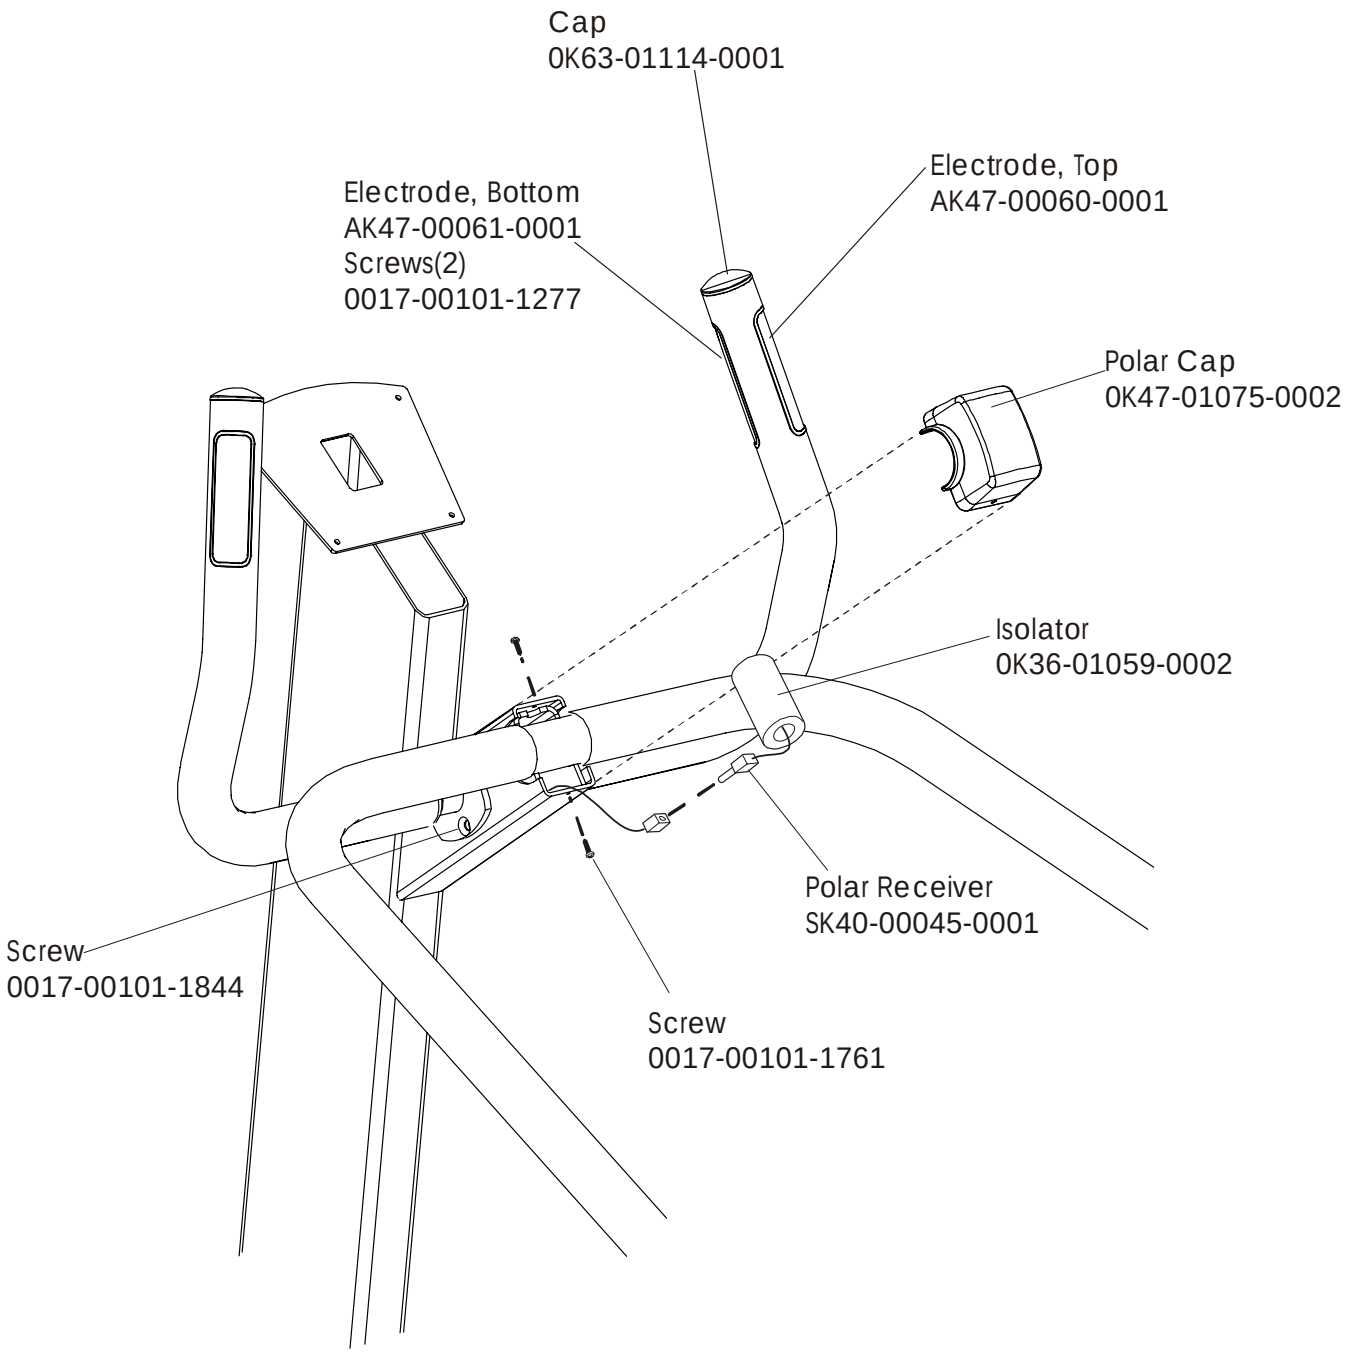
Cap
0K63-01114-0001
Electrode, Top
AK47-00060-0001
Electrode, Bottom
AK47-00061-0001
Screws(2)
0017-00101-1277
Polar Cap
0K47-01075-0002
Isolator
0K36-01059-0002
Polar Receiver
SK40-00045-0001
Screw
0017-00101-1844
Screw
0017-00101-1761

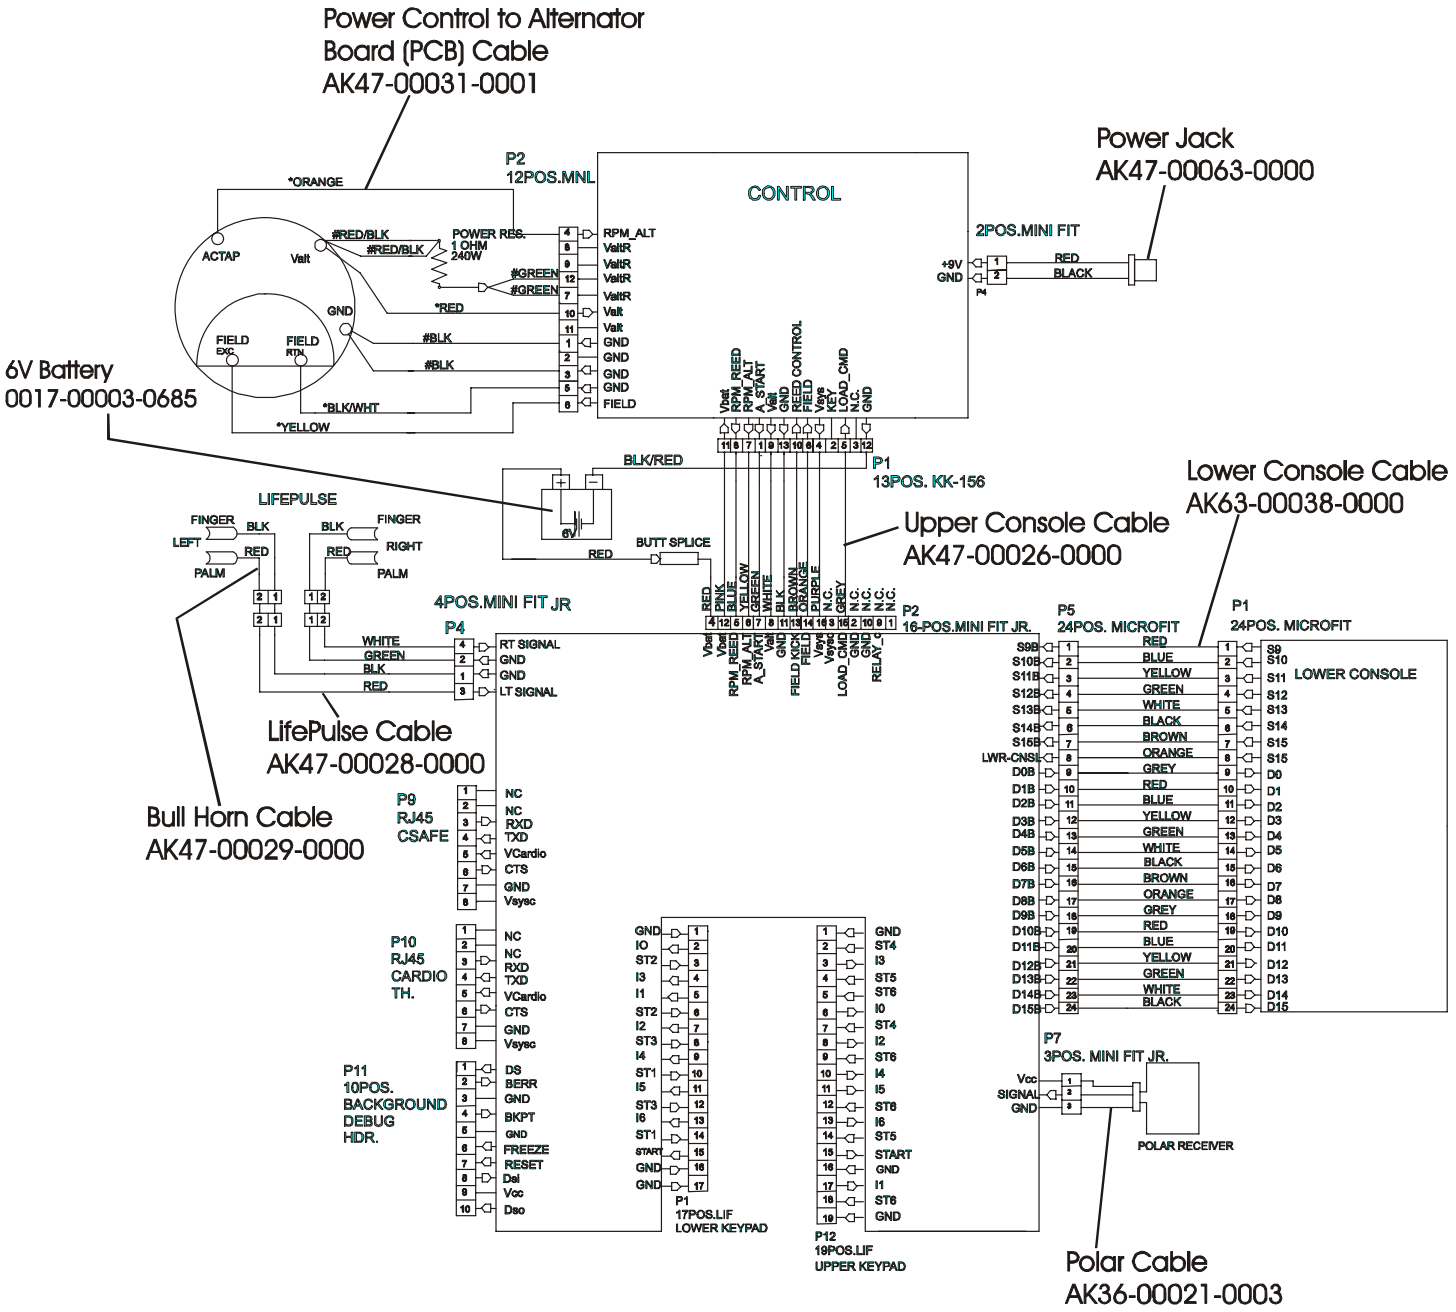

Description	Part Number
Domestic 120/60 Battery Charge w/Cord	118E-00001-0165
Universal Battery Charger w/o Line Cord	118E-00001-0166
Line Cord 220V/60Hz	0017-00003-0704
Line Cord 100V/50Hz	
Line Cord 240+	0017-00003-0918
Line Cord 220V/50Hz	0017-00003-0691
Line Cord 200V/50Hz	
Line Cord 230V/50Hz	